

Ambu[®] Regulator

How to Set the Pain Pump Flow Rate




1 Remove blue lock guard.



2 Gently pull white dial up on regulator.



3 To set the Regulator to desired flow rate, rotate the white dial and align with black position indicator. Increase flow rate turn counter clockwise. Decrease flow rate turn clockwise.

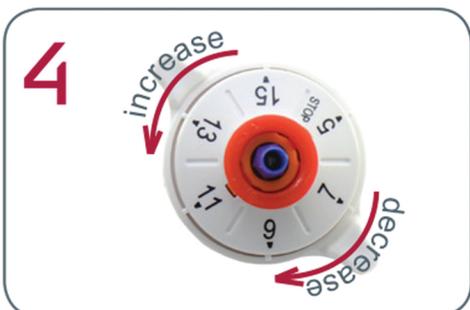

Caution: Regulator is equipped with positive stop at max and min flow rates. Do not force past the positive stop, as this may damage the regulator.




5 Push the white dial back in place to set flow rate. **Avoid pressing the red ring at all times.**



6 To secure flow rate temporarily, insert blue lock guard between the red ring and the white dial.



7 Please **DO NOT** Touch the RED Locking Ring

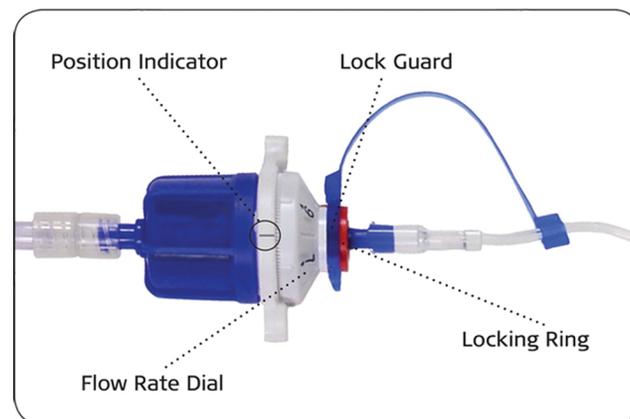

For Questions regarding the Ambu ACTION[™] Pain Pump please call our 24 hour clinical Hotline: (800) 395-2890.

Ambu[®] Regulator

Locking the Regulator




1 Remove blue lock guard.



2 Gently pull white dial up on regulator.



3 To set the Regulator to desired flow rate, rotate the white dial and align with black position indicator. Increase flow rate turn counter clockwise. Decrease flow rate turn clockwise.

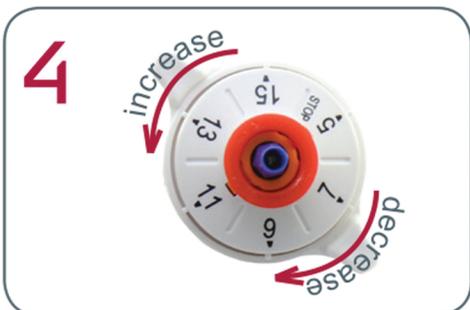

Caution: Regulator is equipped with positive stop at max and min flow rates. Do not force past the positive stop, as this may damage the regulator.




5 Push the white dial back in place to set flow rate. **Avoid pressing the red ring at all times.**



6 Ensure both C-Clamps are open



7 To **permanently** lock flow rate, remove Lock Guard and press red ring down. There will be a tactile and audible response. The regulator can not be unlocked.

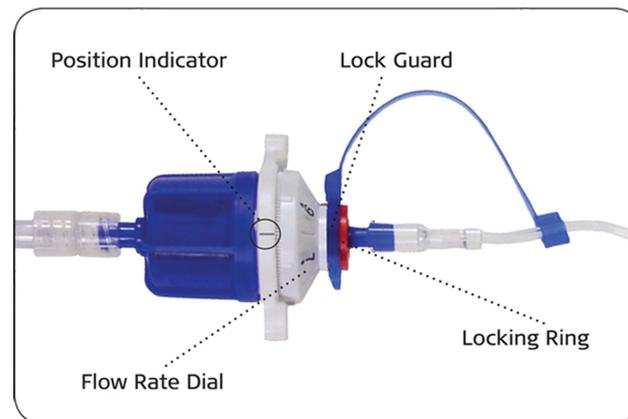

For Questions regarding the Ambu ACTION[™] Pain Pump please call our 24 hour clinical Hotline: (800) 395-2890.